

## CS50 ISDN Only

These are the items that are included in the CS50 Cordless Headset Kit (except phone).

Charging Dock

Wireless Headset

Lifter

Wearing Options

Power Supply

Note: This system works with both 7506 and 7507 series phones.

Administrative Information Only

**CS50**



**Set the handset aside and remove the stickers on the back of the lifter so the adhesive material is showing. Press the lifter onto the phone as shown here.**

Administrative Information Only

## CS50

Disconnect the coiled phone cord from the underside of the phone and connect it to the bottom of the Charging Dock where there is a picture of a handset



Connect the cord from the lifter to the bottom of the Charging Dock.

Administrative Information Only



## CS50

Connect the short phone cord to the handset plug on the phone and to the bottom of the Charging Dock where there is a picture of a phone.



Administrative Information Only

## CS50

Attach the power supply into the Charging Dock where it says "DC9V" and plug into an electrical socket.



## CS50

Choose a wearing style that will be comfortable and attach it to the cordless headset by snapping the speaker onto the ring.

Remove by pushing on the speaker gently until it pops out.



this  
or  
this



Administrative Information Only

## CS50

Replace the handset to its original location.

Slide the Cordless Headset into the Charging Dock and charge initially for 3 hours.





## CS50



- 1. Charging Cradle
- 2. Talk Indicator (Green)
- 3. Power Indicator (Red)
- 4. Telephone Configuration Dial
- 5. Charging Indicator (Amber)
- 6. IntelliStand Switch

Administrative Information Only



**CS50**



- 7. Speak Volume Fine Tune**
- 8. Listen Volume Master**

Administrative Information Only


## CS50



- 9. Speaker Volume Master
- 10. Telephone Base Jack
- 11. Handset Lifter Jack
- 12. AC Power Adapter Jack
- 13. Handset Jack

Administrative Information Only

## CS50

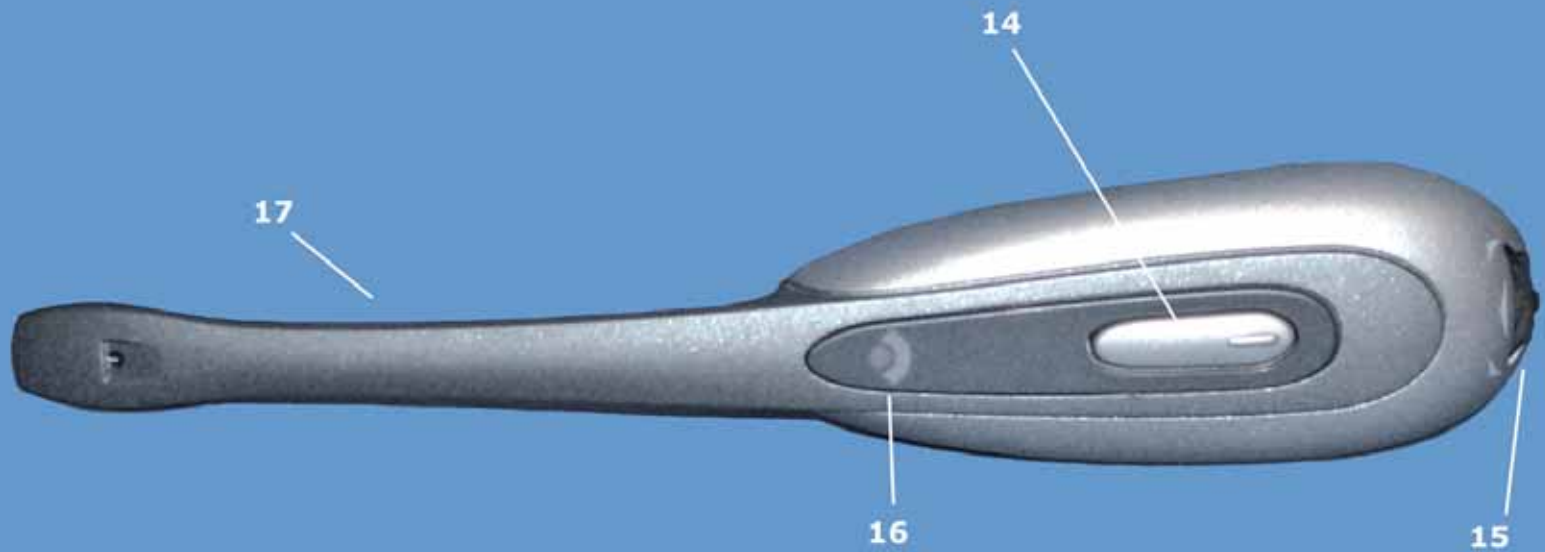

- 14. Talk Button
- 15. Listen Volume/Mute Control
- 16. Talk Indicator Light
- 17. Microphone Boom

Administrative Information Only

## CS50



- 18. Microphone
- 19. Battery Contacts
- 20. Headset Speaker Capsule



# **Troubleshooting for CS50**

## **1. I cannot hear a dial tone**

- **Make sure the Wireless Headset is securely seated in the Charging Dock and/or fully charged. The Wireless Headset must charge for 3 hours prior to the first use.**
- **Check that all cords are correctly connected and firmly in place. Pay special attention that the Handset and Telephone cords are properly connected.**
- **Adjust the Telephone Configuration Dial (4) on the base to another one of its 4 positions until you hear a dial tone.**
- **Adjust the Listen Volume Control. (8)**
- **Make sure handset is off-hook.**
- **Return the Wireless Headset to the Charging Dock for 5 seconds to re-establish a communication link.**

## **2. Caller cannot hear my voice**

- **Make sure the mute button (15) is off.**
- **Adjust the Speak Volume Master (9) and the Speak Volume Fine Tune (7) until the caller can hear you.**
- **Adjust the headset so the Microphone Boom is closer to your mouth.**